



QR code for Installations Instructions



The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class I and must be grounded!

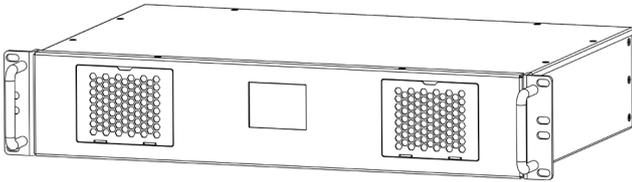



Rack

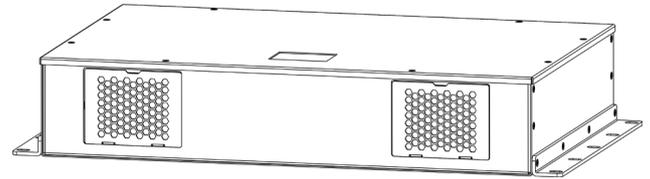

Wall mount

The ArcPower Unit pixel Rack is designed for mounting into 19-inch equipment rack.


STEP 1
ARCPower UNIT PIXEL CONNECTION

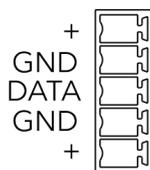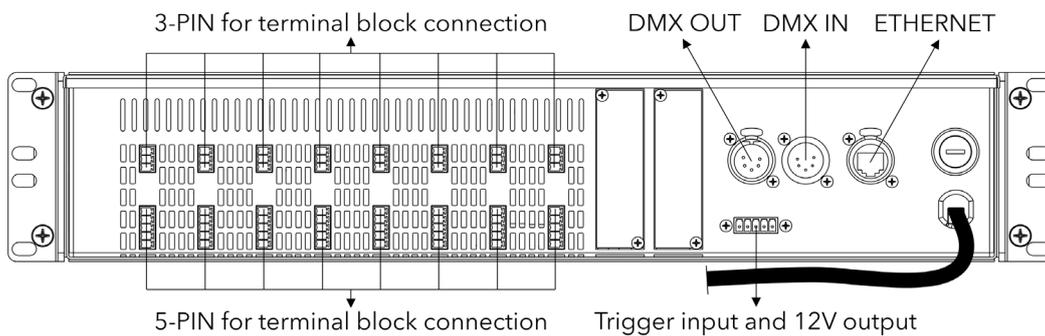

5-PIN for terminal block connection





3-PIN for terminal block connection

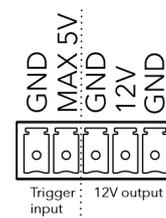


Trigger

STEP 2A
ARCPower UNIT PIXEL - RACK INSTALLATION

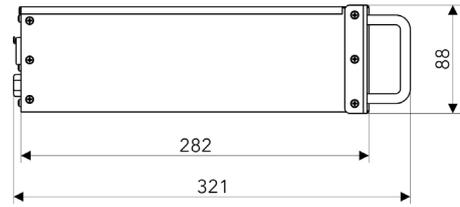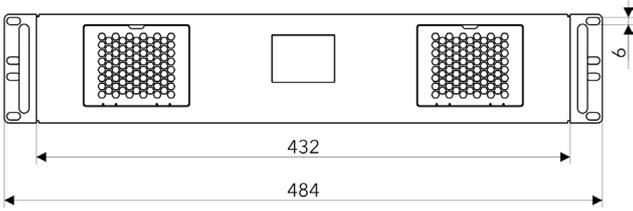


1

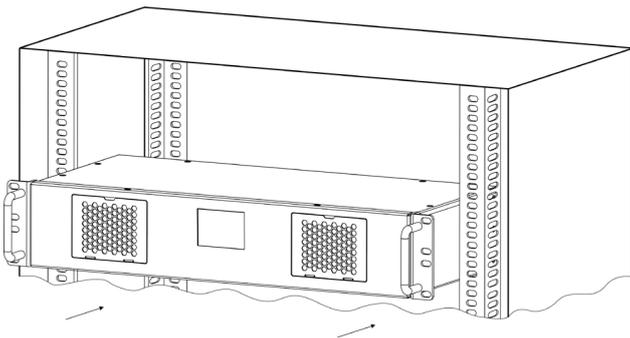


Install ArcPower Rack Unit into the rack case.

2

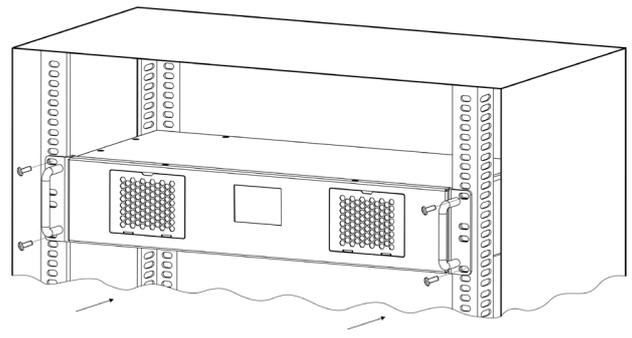


Fasten the ArcPower Rack Unit into rack by means of two screws on each side of the Ambiane Power Rack .

STEP 2B
ARCPower UNIT PIXEL - WALL MOUNT INSTALLATION

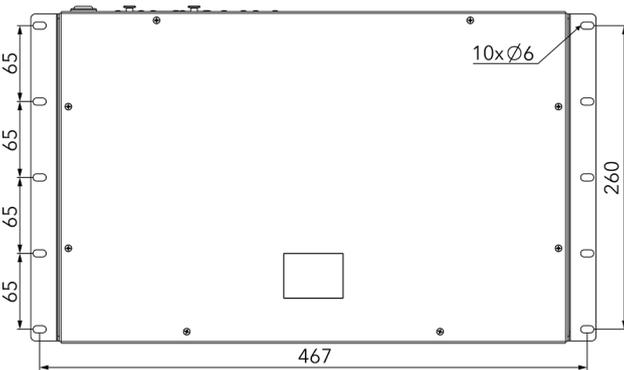

Holes spacing.

⚠ Use fasteners that are appropriate for use with your mounting surface. ⚠

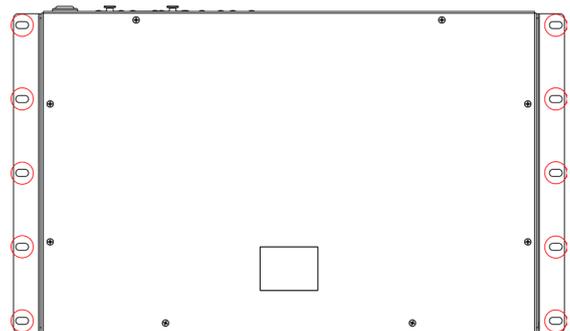

Drill holes to the surface according to holes spacing. Mount ArcPower Unit Pixel via mounting holes on the surface.